

# **User's Manual**

## Function overview

- 1 The first one who introduced rotate camera. Shooting from different angles.
- 2 Visible LCD screen to make the operations easy and visible.
- 3 Compact size with clip.
- 4 Working as a digital voice recorder. With built-in high sensitive microphone.
- 5 Built-in speaker.
- 6 Automatic recording-section-break function and save function when audio and video recording.
- 7 Working as a webcam.
- 8 Drive free USB flash disk.
- 9 With built-in rechargeable heavy-duty polymer lithium battery.

## Appearances



## 1 Operations

**1 Turn on/off:** Press ON/OFF button, the screen will light-up in 5 seconds and the recorder is turned on. The recorder enters into the main menu. Repress ON/OFF button for around 3 seconds, the recorder is turned off. The recorder will turn off automatically in approx. 1 minute if no operations on the recorder.

### 2 Taking video:

Hand-grasp style:



Clip style:



Please press forward or Rewind button to select the video mode in the main menu. *See Screenshots below*





Press M button to enter into the video mode. Please press ON/OFF button to start taking video. Re-press the ON/OFF button to stop. Press M button to back to main menu.

After taking video for 60 minutes, the device will automatically start a new file to continue taking video.

Delete the video: Hold on M button for around 3 seconds until “Del” indicated on the screen. Then press ON/OFF button to

confirm the deletion.

Attention: When the screen shows “FULL”, this indicates that the memory is full. Delete unused files or transfer them to a different storage medium to create space for new videos, pictures or voice recordings. Please recharge the battery in time when  twinkles on the screen. The recorder will save the file automatically after  twinkled on the screen and then turns off.

### 3 Taking pictures:

Please press forward or Rewind button to select the picture mode in the main menu. *See Screenshots below*



Press M button to enter into the mode. Press the ON/OFF button to take pictures. Each press takes 1 picture. Press M button to back to main menu.

Delete the picture: Hold on “M” button for around 3 seconds until “Del” indicated on the screen. Then press ON/OFF button to confirm the deletion.

### 4 Taking voice recordings:

Please press forward or Rewind button to select the voice

recording mode in the main menu. See Screenshots below



Press M button to enter into the mode. Press the ON/OFF button to start voice recording. Repress the ON/OFF button to stop. Press “M” button to back to main menu.

After taking voice recording for 180 minutes, the device will automatically start a new file to continue recording.

## **Playing back the voice recordings:**

Please press forward or Rewind button to select the voice-recording playing mode in the main menu. See Screenshots below Then press ON/OFF button to play the voice recordings. Repress the ON/OFF button to stop playing.



**5 Playing back the music:** Please press forward or Rewind button to select the music playing mode in the main menu.

See Screenshots below Then press ON/OFF button to playing the music. Repress the ON/OFF button to stop playing.



**6 Adjusting the volume:** Press +/- controls to adjust the volume.

Select the files to play, fast forward/Rewind: Press forward/Rewind button to select the next or last file to play. Long time press the forward/Rewind button while playing to play fast forward or fast rewind.

Deletion: Long time press “M” button for around 3 seconds until “del” indicate on the screen, then press ON/OFF button to confirm the deletion.

Attention: Music should be saved at “ \*:\ AUDIO” folder. Otherwise it cannot be recognized by recorder and can not be played back.

**7 Webcam:** Press forward/Rewind button in the main menu to select the webcam mode: See Screenshots below



Press “M” button to enter into webcam mode. Then connect the recorder with computer via USB cable. The recorder can be used as a webcam. Press “M” button to back to main menu.

Attention: Please install the driver if the computer didn't have the driver in it. Please install the webcam driver from the CD.

## **8 Setting time:**

The recorder can indicate the time for video document. The time format is: Year-month-date hour:minute:second. Please connect the recorder with computer via USB cable. Please create a new TXT file on the computer and rename the TXT file as SystemTime.txt. Open the file and type the time in the file. The format is Year-month-date Hour:minute:second.( Please make a space between date and hour. E.g. 2010-01-10 01:10:28). Please copy the TXT file and save into the recorder. Turn off the recorder then turn on. The time is setting successfully.

## **9 Recharge the recorder.**

Please connect the recorder with recharger when the recorder is off or at standby mode. After the recorder full recharged, the battery

sign on the screen become full. The recorder will become a little hot when recharging. It is normal phenomenon.

Attention: The recorder has built-in 3.7V rechargeable polymer lithium battery. But please recharge it for 8 hours each time at first 5 times to make sure the maximum power can be stimulated.

## Technical specifications

- Video format: AVI, 640\*480.
- Voice recording format: WAV /128Kbps
- Photo format: JPEG, resolution :1280\*1024
- Supported system:2000/xp/2003/vista
- Video size: 9MB - 30MB / minute
- Voice recording size: 0.9MB/minute.
- Webcam : 0.3MP/1.3MP/2.0MP
- Polymer lithium battery: 300m Ah
- Storage: built-in , 128M-4GB
- Size: 86.5mm x 30 mm x 19mm

## Cautions:

Please avoid strong vibration or shocks when using the recorder.

Please do not use the recorder in strong magnetic and strong electronic environment. Please do not use the recorder in the place where dusty and damp. Please do not disassemble or replace the inner parts yourself. Please backup important files on the computer before sending for repair. We are not responsible for the losses of information which caused by repair or other reasons. We will not free repair the product which is damaged by misuse.

This recorder is not the professional storage device. We can not assure the files in the recorder will not be damaged. Please backup the important documents in the computer or other storage device. Please use FAT32 system to format the recorder.

Please don't pull out the recorder from computer when data transferring. Otherwise it will cause error. The files on the recorder will be damaged or missed.

If the recorder is crashed or has frozen problem, please insert a non-metal little stick into the restoration whole and have a press into it. Then turn off the recorder. The recorder will be recovered. Please do not press the restoration whole during the recorder is working. It will cause the files damaged or missed.

We are not responsible for improper usage of this device. Please read the instruction manual carefully before using the device.

In order to avoid bombing, please keep the device away from high temperature, and naked flame when recharging.

We reserve the right to modify the design and specifications in future models.