
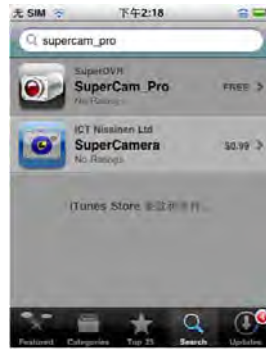


## Iphone Setup Guide for 79/SE/ME/MD/HE Dvr Series


### 1. Installing through iphone/iPad.

**Step 1.** Open App Store function of iphone

**Step 2.** Select “search”  function to search for “SuperCam”



**Step 3:** Click SuperCam, enter into “introduce” interface and then click “FREE”, it will change into “INSTALL”

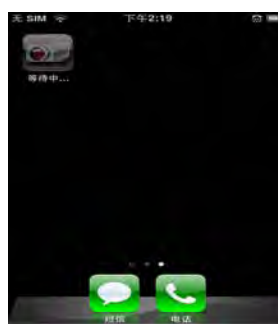

**Step 4:** Input iTunes Store password and then click “OK”, the software will be installed automatically.


**Note:** If this is the first time you are accessing the Store you need to enter user ID; if you do not have a Store account, you need to create one.

Step 6: Checkmark “synchronously apply program” and “SuperCam”, and then click “apply” button

## Operation Instructions for iPhone/iPad

### 1. Login interface


Server:  
lts2316me.dvrlists.com:8101  
username:  
admin  
password: 123456

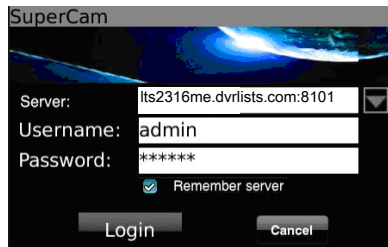

Enter server’s IP address (or domain name), user name and password

Click “Remember server” to save the setting; clicking ▼ button can quickly input saved server address, user name and password.


### 2. Main Interface

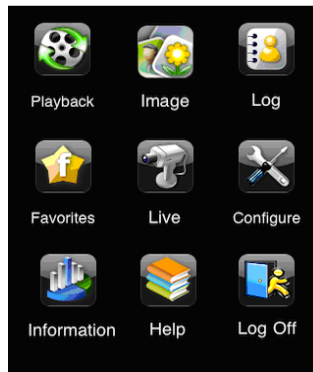

**NOTE: If you click on the Help icon you will bring up a help menu with a list of the functions of the different buttons and how to use them.**

<b>Playback</b>	playback recorded files	<b>Image</b>	image view
<b>Log</b>	log record	<b>Server List</b>	device list
<b>Live</b>	live view	<b>Settings</b>	software settings
<b>Information</b>	device information view	<b>Help</b>	software help center
<b>Logoff</b>	logoff and return to login interface		

### 3. Live View Interface

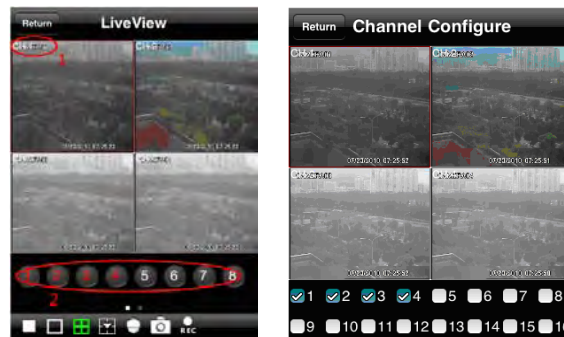



Symbol	Current viewing channel	Symbol	Channel status
	Switch channels		PTZ, click to switch to Fig 2 interface
	Snap picture		Record
	Close the video of the current channel		Live audio
	Switch to the single image		Switch to four images
	Move the PTZ Up		Rotate the PTZ Down
	Move the PTZ to the Left		Move the PTZ to the Right
	Stop rotating the PTZ		Zoom In/Focus In/Iris Add
	Zoom Out/Focus Out/Iris Sub	Preset	Select the preset point
Group	Set the cruise line	Speed	Rotate speed of the PTZ
H-Reserve	Horizontal- Reserve	V-Reserve	Vertical- Reserve

#### 4. Image view interface



- play/pause
- stop
- forward
- backward


#### 5. Record Playback interface






- previous
- next
- the first picture
- the last picture
- cope pictures to album
- delete


Click the record file to playback.
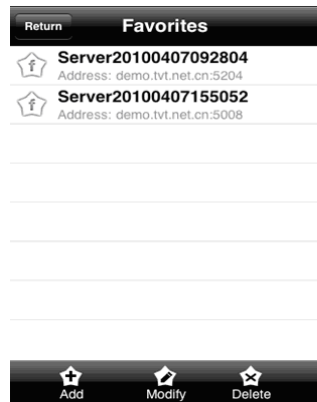
## 5. Server list Interface



-  Add a server list
-  Modify a server list
-  Delete a server list

## 6. Configuration interface

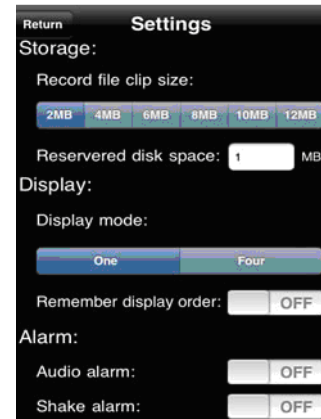

Main parameters for mobile phone video configuration:

**Record file clip size:** Single video size. When the video size is greater than setup value, change to another video file size setting.


**Reserved disk space:** Reserved SD Card disk space, when the available disk space is less than setup value, the video will be stopped

**Display mode:** User can select one live picture display or four live picture displays

**Remember display order:** User can choose whether to remember display order or not.

**Alarm config/Select Audio Alarm.** When Video Loss/Sensor/Motion occurs a sound alarm will be triggered.. **Select shake Alarm.** When Video Loss/Sensor/Motion occurs it will trigger vibrate alarm.

## 7. Information View Interface

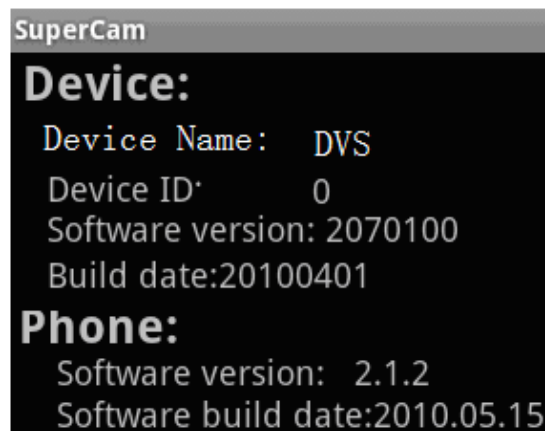

**Device name:** the current device name

**Device ID:** the current connection device ID

**Software version:** the current connection device software version

**Build date:** the current connection device build date

**Software version:** the software version of mobile phone in use

**Software build date:** the software build date of mobile phone in use