

www.safetybasement.com

Model TC-A

VOICE CHANGER

Sound Different,

Protect Your Family & Business

Made In China

INTRODUCTION

If you wanted to change your voice over the phone, the TC-A is the instrument to have. There are 8 different levels of voice changing, 4 up and 4 down. Adjust the TC-A up or down a couple of levels to change your voice and sound realistic. Even your closest friend won't recognize you. Adjust the TC-A further up or down and sound like a cartoon character, or an evil villain. When you need your phone in the normal mode, simply turn off until next time. It's that simple. Plus, we designed the unit to be portable and adaptable. You could easily take the TC-A to work, home, or over to a friend's house. The TC-A can adapt to nearly any type of phone system.

APPLICATIONS

Anyone at home alone-Any person home alone is vulnerable. The TC-A can be used over the course of successive calls to give the impression that more than one person is present.

Children-When children must be home alone(after school,for example)the TC-A can be used to give callers the impression that adults are also present.

Elderly-If a criminal knows that only an elderly person is present,he may consider that home an easy target.The TC-A will give the impression that others are present.

2

Avoid unwanted telephone calls-With the VOICE CHANGER anyone can act as his or her own secretary.

Make a company seem larger-Potential clients don't have to know a company is too small for receptionists or secretaries.



INSTALLATION BATTERIES

Install three new AA(UM-3)batteries(not included)into the battery compartment in the back of the unit.Ensure that the battery polarity is correct the by following the diagram within the battery compartment.We recommend the use of alkaline batteries for best results.

CONNECTION


3

1. Remove the telephone-handset cord from the telephone. Do this by depressing the small tab and unlocking the RJ14 connector.

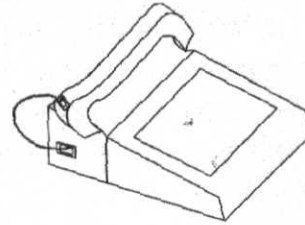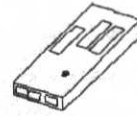


4

2. Plug this connector into the jack labeled **HANDSET** on the TC-A unit.

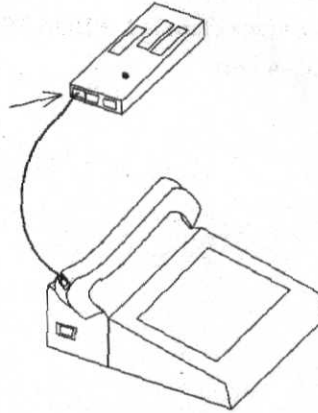

5

3. Plug the included handset cord into the jack labeled PHONESET on the TC-A unit.

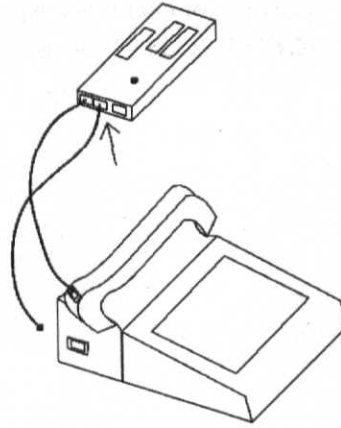


6

4. Plug the other end of the handset cord into the phoneset.

OPERATION

1. You may use the telephone normally without affecting the pitch of your voice. Simply pick up and the replace the handset as your normally would while the telephone. The TC-A will pass through your voice unchanger.

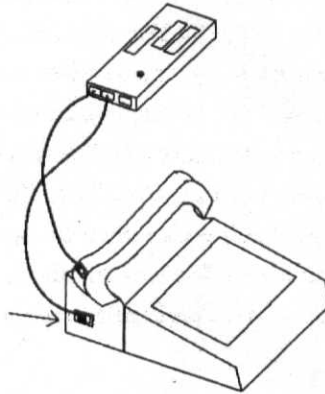

7

2. To engage the voice changing function press the button on top of the unit labeled PITCH. The PITCH LED on the front of the unit should illuminate when pick up the handset. Select the pitch level with the two controls labeled PITCH. The two position switch with the labels LOW and HIGH will select a band. The LOW band contains four pitch levels lower than the sound of your natural voice. The HIGH band contains four levels higher than your natural voice. Use the four-position switch to select from the four different pitch levels. The two bands in combination with four pitch levels for each band provide eight different pitches for you to select from.


8

3. While using the voice changing function you may hear your changed voice at a low level in the earpiece of the telephone handset. This is normal. These positions are provided for those individuals who have naturally very low or very high voice or for those individual who desire the greatest level of voice disguise.

4. Switch using PHONE TYPE can be switched to 1 or 2 to allow this unit to be used with many variations of telephone in use today.

9

VOICE CHANGER
Quick Guide Feature

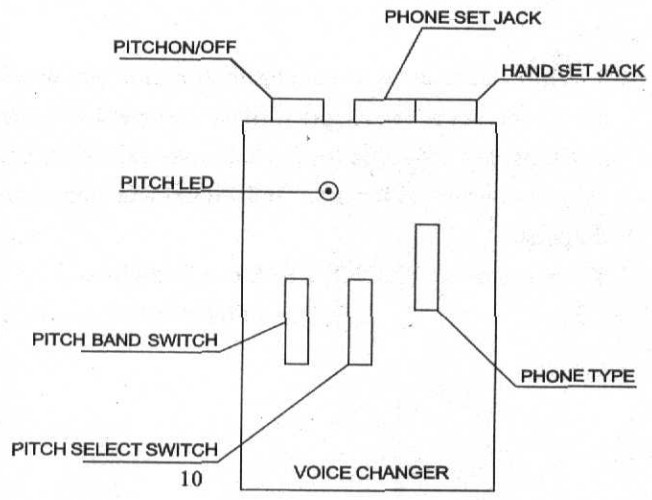

PACKAGE CONTENTS

- ① One Telephone Voice Changer
- ② One Telephone Handset Cord
- ③ One Instruction Manual